



Install Guide for **GPX-HO4** Harness Kit

For use with the following HONDA motorcycles:

VT750S [Fuel Injected model] (2010-2014)

<u>Disclaimer:</u> Do not attempt to install the product if you don't have basic mechanical skills. HealTech Electronics Ltd. and its distributors shall not be liable for any loss or damage caused by improper installation. If in doubt, please consult with your dealer.

1. Locating the Speed Sensor coupler

Preparation:

- The ignition key should be in OFF position.
- Remove the seat.

The speedometer is driven off the front wheel. Trace the cable until you find the **3-pole black** speed sensor connector under the fuel tank. Disconnect the coupler.

2. Installation

1. After separating the Speed Sensor coupler, plug in both the male and female 3-pole GIpro harness connectors. Make sure the connectors are fully seated.

If you have a **SpeedoHealer** installed, you have to connect the plugs inline in the following order:

Speed sensor plug \rightarrow GIpro \rightarrow SH \rightarrow bike plug

- 2. Locate the Crankshaft position (CKP) sensor **YELLOW** signal wire (solid yellow with no stripe), either at the 2-pole sensor connector, or at the ECU connector (gray plug, pin #22).
- **3.** Connect the GIpro **Black/Green** wire to this wire, using the **Red wire tap** connector supplied.

Usage: Place the unstripped run wire (YELLOW) inside the run channel. Close the side cover until latched. Cut off the excess length, then insert the unstripped tap wire (Black/Green) completely and check its position. Insert the blade (u-contact) and press down by finger pressure. Then, fully depress the u-contact with pliers. Close the hinged top cover until latched.

- **4.** Connect the 4-pole GIpro harness connector to the GIpro display connector.
- **5.** Check whether everything is installed and working properly:
 - Select Neutral and turn ignition On →
 The GIpro display should count from 6 to 1, then "L" flashes slowly.
 (If not, the display is not receiving power and/or ground. Check the connections at the speed sensor connector.)
 - Rotate the wheels → the display should indicate a rolling wheel.
 (If not, the display is not receiving the speed signal. Check the connection at the speed sensor connector.)
 - Start the engine → "L" should flash faster for a few seconds. (If not, the display is not receiving the RPM signal. Check the wire tap.)

Turn the ignition Off. If the tests still fail, disconnect the 3-pole and 4-pole connectors and check whether the connector pins are bent or pushed out of position. Spray some WD40 into the plugs.

- **6.** Peel off the green plastic from the back of the unit, and mount the display.
- Neatly route the GIpro harness from the 3-pole plugs to the mounting location, preferably along the frame.
 <u>Do not bend</u> the harness near the 4-pole connectors.
 Do not route the harness very close to the exhaust pipe or cylinder head.
- **8.** Use black tape to secure and isolate the 4-pole connectors. To minimize cable stress, use the supplied cable ties to fasten the unit and harness to other cables.